

Notice for Use


Thanks for choosing Joyetech products! Please read this manual carefully to ensure proper use. For additional information or questions regarding the product or its use, please consult your local Joyetech retailer, or visit our website at www.joyetech.com.

Joyetech eVic supreme is the next generation of the Vapor Intelligent Cigarette product.

Upgraded Features

- Maximum output wattage - 30W.
- Maximum output voltage - 6V.
- Support 0.50~5.0.
- OLED display screen (adopts 0.96 -inch, 64 x 128 pixels), with a 16 color grayscale display, which can show the photos more clearly on the device.
- More humanized menu design with new functions.
- Stainless Steel Construction
- Changeable atomizer connector.

eVic supreme configuration

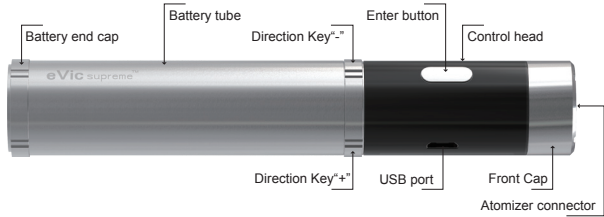


1 | eVic supreme | English

The display menu and operation method

A: Main menu

Operation: Click the enter button 5 times within 1.5s to enter the main menu. Use the direction key to select menu option, once you have selected your option, use the enter button to access the submenu

Main menu display:

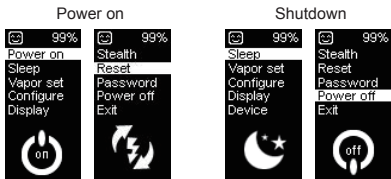

Menu function list

Menu screen	Function	Menu screen	Function
Power on	Turn on the device	Device	Device information
Power off	Turn off the device	Stealth	Hides the screen during usage (power saver)
Sleep	Lock the system	Reset	Device reset
Vapor set	Vapor set	Password	Password set
Configure	Device set	Exit	Exit the main menu
Display	Display set		


B: eVic supreme function operation

Power on: In the main menu, under power off mode, select "Power on" and click enter button. The screen will display the start-up animation.

- ① When the eVic supreme detects a 2.2Q atomizer:
- ② The eVic supreme could NOT detect an atomizer
- ③ The eVic supreme detected a short while connected to an atomizer:


Power off: Under the "power on" mode, Select "power off" and push the enter button. The screen will display the shut off animation.④

English | eVic supreme | 2

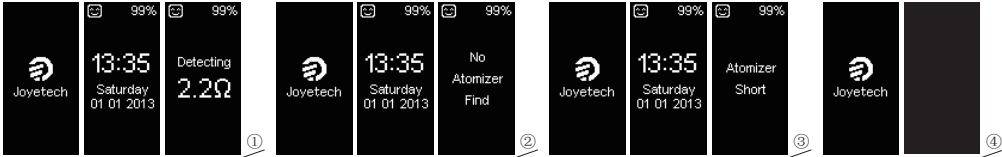


Vapor set: Select "Vapor set" and click the enter button to access the secondary menu. While navigating the menu, the direction key is to select the highlighted option, the enter button is to confirm your selection.

Switch device output mode selection

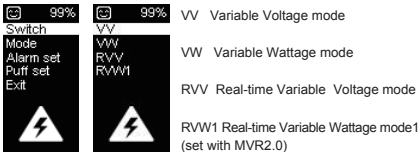


Mode Button mode selection

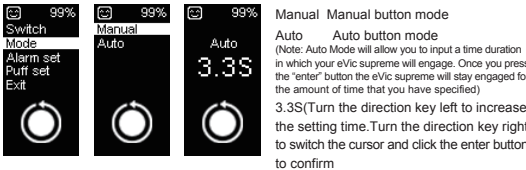

3 | eVic supreme | English

Alarm set (In the alarm settings, a warning screen will show if the maximum time or puff values are reached. If both the time and puff are not reached within the set duration, the time and puff value will reset and start counting at the beginning of next cycle.

Never exit to the main menu automatically after selecting this option. **Customize** (Customized definition) **Exit** (Exit to the secondary menu)

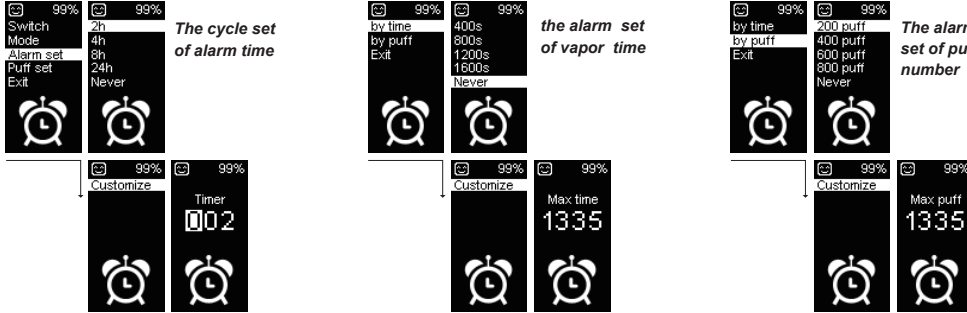


024h (Turn the direction key left to increase the setting time. Turn the direction key right to switch the cursor and click the enter button to confirm.)


3200s (Turn the direction key left to increase the setting time, rotate right to move the cursor, then click the enter button to confirm)

0800 (Turn the direction key left to increase the puff, rotate right to move the cursor, then click the enter button to confirm)

English | eVic supreme | 4

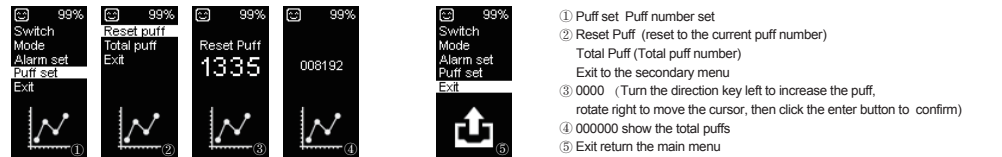

Configure: Select "Configure" and click enter button to the secondary menu. While navigating the menu, use the direction key to select your option, Use the enter button to confirm your selection.

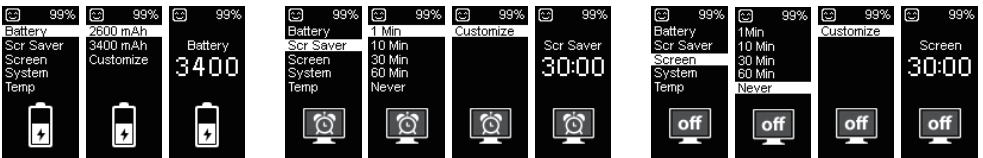


2600 (Turn the direction key left to increase the value, rotate right to move the cursor)

Scr Saver Select time to operate the screen saver 00:01 (Turn the direction key left to increase the value, rotate right to move the cursor, then click the enter button to confirm)

Screen select the showing time on display 00:01 (Turn the direction key left to increase the value, rotate right to move the cursor, then click the enter button to confirm)

5 | eVic supreme | English

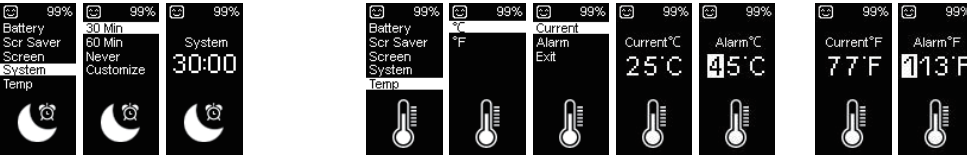

System Select the standby time about system 00:30 (Turn the direction key left to increase the value, rotate right to move the cursor, then click the enter button to confirm)

Temp Temp show the current temperature of this device: °C select "°C" to display the temperature °F select "°F" to display the temperature Current display the current temperature on the device (please insert your atomizer) Alarm select the alarm of temperature 25°C/77°F (it will show you the current temperature of the device when you attach the atomizer, and it will display "Please Insert Atomizer" if you not attached the atomizer) 45°C/113°F (Turn the direction key left to increase the value, rotate right to move the cursor, then click the enter button to confirm Minimum alarm of temperature is 40 °C)


Calendar set the current time and date:

24hour Select to display the time in 24-hour system
① Show Time show the current time ② Set Time
⑤ Set Data ⑥ Set Year



English | eVic supreme | 6

Display: Select "Display" and click enter button to the secondary menu. During menu operations, the direction key is to select the menu, the enter button is to confirm the menu.

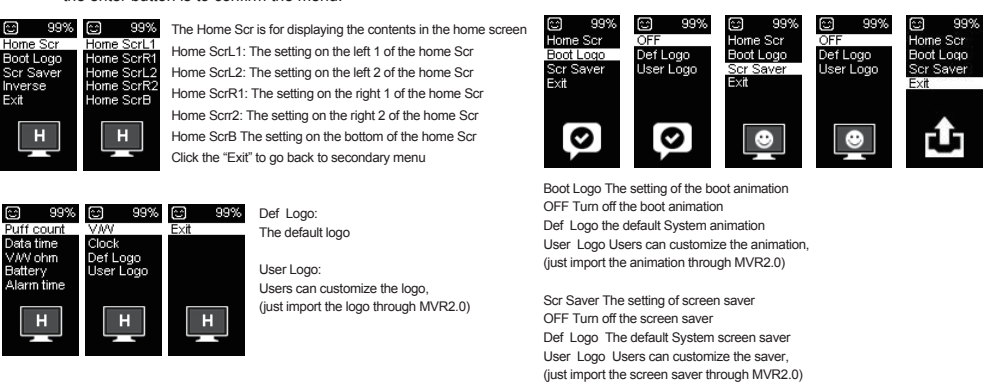


Boot Logo The setting of the boot animation OFF Turn off the boot animation DEF Logo The default System animation User Logo Users can customize the animation, (just import the animation through MVR2.0)

Scr Saver The setting of screen saver OFF Turn off the screen saver DEF Logo The default System screen saver User Logo Users can customize the saver, (just import the screen saver through MVR2.0)


7 | eVic supreme | English

Device: Select "Device" and click enter button to access the secondary menu. While navigating the menu, the direction key is used to highlight your option. Use the enter button is to confirm your selection.

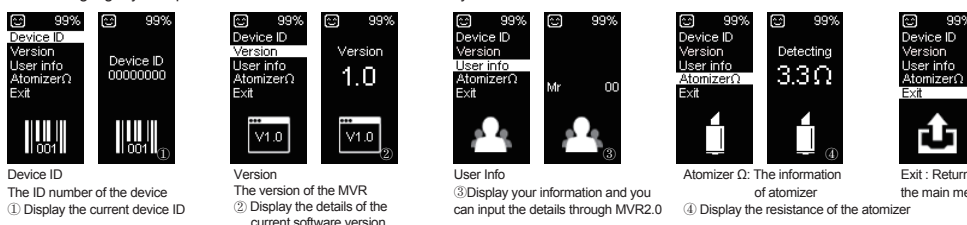

Stealth: Select "Stealth" and click enter button to access the secondary menu. While navigating the menu, use the direction key to highlight your option. Use the enter button is to confirm your selection.

 Reset: Select "Reset" and click enter button to the secondary menu. While navigating the menus, use the direction key to highlight your option. Use the enter button is to confirm your selection.




English | eVic supreme | 8

Password: Select "Password" and click enter button to access the secondary menu. While navigating the menus, the direction key is to select the menu, the enter button is to confirm the menu.

Main function

Click "Power on" to turn on the device. The screen will be black after animation, then click "Enter" button and it will show as below,

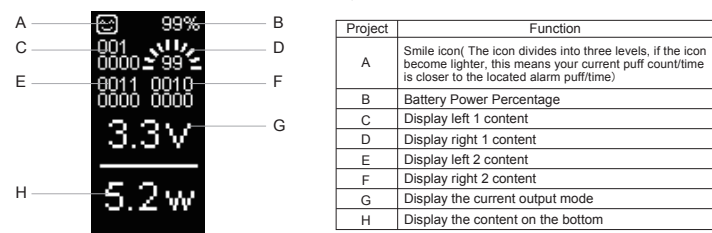

The main interface shortcuts

1, Under VV and VW mode, turn the "direction key" left to decrease the voltage or power, and turn the "direction key" right to increase the voltage or power.

9 | eVic supreme | English

2, Under VV and VW mode, continuous rotation to the left or right "direction key" 3 times can realize continuous reduction or increase on voltage or power, press "enter" button to stop that.

3, Continuously press the "enter key" three times to enter the home screen, and turn the "direction key" right to do the selection operation on the display area (C,D,E,F,G,H). The selected area will flash, and then turn the "direction key" left to do the content switch, press "enter" button to confirm.

When you connect atomizer normally, and then press enter button long, the atomizer will work. At the same time, when you normal vapor, the screen will show the time of vapor. ① When you loosen button, the screen will be blank after keeping 5s. But if you click enter button and hold on during 5s, the atomizer will work and time again.

Atomizer Short alarm: ② If the connective atomizer has short circuit or output appears short circuit, and then you click enter button and hold on, the battery will not output and appear alarm screen.

No Atomizer Find alarm: ③ If the connective atomizer has open circuit or the atomizer without connection, and then you can keep pressing the enter button, the battery will not output and appear alarm screen.

Over 10s Protection: ④ In order to protect atomizer and battery, the battery will enter into working overtime protection when it keeps working over 10s.

Power low Protection: ⑤ When the battery energy is below 5%, low voltage warning shows up during vaporizing. When the battery energy is 0%, the device will shut down automatically.


English | eVic supreme | 10

Password Protection: ⑥ To enable this feature, a four-digit password must be entered when the eVic supreme is powered on (the default password 0000). The direction key is used for choosing the small keyboard digital, and "enter" key is the confirm key. If you forget the password, please use the MVR 2.0 software to find or reset the password. (refer to MVR2.0 software instruction for more specific information)

Overheating Protection: ⑦ When the device's temperature is over the temperature protection setting, the home screen will appear flashing thermometer icon. Kindly suggest you'd better stop using the device at that time until the device's temperature goes down. When the device's temperature is over the normal operation temperature range, it would appear the high temperature alarm interface ⑧ and shut off the output.

Max puff Alarm: ⑨ When your puff is over the maximum puff you set, the home screen will appear the "Max puff" alarm rather than the vapor seconds.

Max time Alarm: ⑩ When your vapor time is over the maximum time you set, the home screen will appear the "Max time" alarm rather than the vapor seconds.

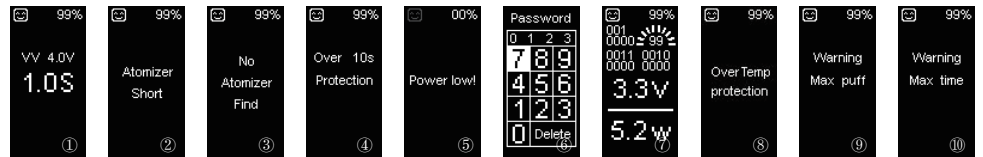


11 | eVic supreme | English

Battery Overload Protection Mode: ① When the battery is unable to provide current output power, it will enter into the battery overload protection mode. If this occurs, please do the following:

- 1 Lower the voltage or wattage
- 2 Use a higher resistance atomizer
- 3 Charge the battery
- 4 Replace the battery

Charging conditions:
② Plug the USB cable in the wall adapter to charge the eVic supreme
③ Use a high-power USB port on your computer to charge the eVic supreme
④ Fully charged

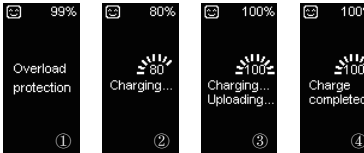

Lithium-ion battery instruction

In order to ensure the normal use of the product, we recommend using the original lithium-ion battery or high-rate lithium-ion battery with high quality. The ordinary lithium-ion battery is not recommended.

PC software instruction

* Merchandise failure or damage is caused due to improper use or unauthorized repair.
* Merchandise failure or damage as a result of excessive force such as dropping.
* Merchandise failure or damage as a result of usage outside of recommended operating conditions (see precautions in usage manual).
* Merchandise failure or damage caused by improper use of water or other liquid (see usage manual for operating instructions).
* Merchandise failure or damage due to usage with non-Joyetech components (charger, battery, and power cable).

3. This warranty does not cover personal items or consumable goods and attachments, including but not limited to: mouthpiece, cartridge, atomizer head, lanyard, and leather sheath.

4. This warranty does not cover any non-Joyetech brand products. This warranty is only valid for eligible Joyetech brand products during the warranty period of 90 days after date of purchase as indicated on proof of purchase.

Joyetech reserves the right of final decision in all warranty cases. Joyetech may interpret and revise the content of this warranty terms.

Joyetech (Shenzhen) Electronics Co., Ltd.
Email: info@joyetech.com

English | eVic supreme | 14

Precautions
1. Only have your eVic supreme repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.
2. Do not leave the eVic supreme in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0°C to 45°C while charging and -10°C to 60°C while in use.
3. Do not attempt to combine the eVic supreme with parts from other brands of e-cigarettes. If it is damaged in this way, Joyetech will not take responsibility and your warranty will be void.

Warranty terms

Please consult your Joyetech product warranty card. We are not responsible for any damage caused by user error. Our warranty is not valid for products purchased from third party vendors.

Joyetech agrees to provide repair under warranty pursuant to the following terms and conditions:

This warranty provides repair free of charge for defective Joyetech brand merchandise. Warranty period is 90 days from date of purchase by the end user.

2. This warranty may be void as a result of any of the following conditions:
* Customer does not provide warranty card and original receipt of purchase.

13 | eVic supreme | English

使用须知

感谢您选择卓尔悦！


使用前请仔细阅读该手册以确保正确使用。如果您需要其他信息或者对产品及其使用有任何问题，请联系当地的卓尔悦代理商，或者访问我们的网站www.joyetech.com

eVic supreme电池是新一代大功率智能化电池。

升级功能

- 最大输出功率达到30W
- 最大输出电压6V
- 支持0.5Ω~5Ω阻值的雾化器，使用范围更广
- OLED显示屏（采用0.96寸64*128像素），显示更清晰，更细腻，它的16阶灰度功能可以让我们把照片在设备上清晰的显示出来。
- 更加人性化的菜单设计，更加强大的功能，带来更加与众不同的使用体验。
- 不锈钢材料
- 可换式雾化器连接环

eVic supreme的组成

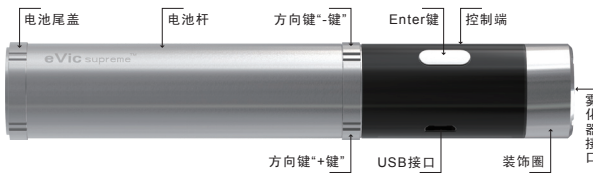


1 | eVic supreme™ | Chinese

了解显示菜单及操作方法


A：主菜单

操作：1.5S内连续按5下开关（enter键）进入主菜单，并通过“方向键”进行菜单选项选择，按“enter键”确认进入二级菜单。
主菜单显示：

开机状态

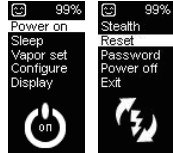

关机状态

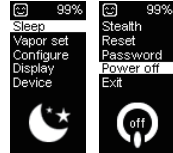

菜单功能列表

菜单显示	功 能	菜单显示	功 能
Power on	开机	Device	设备信息
Power off	关机	Stealth	抽烟时间显示设置
Sleep	休眠	Reset	设备复位
Vapor set	抽烟设置	Password	开机密码设置
Configure	设备设置	Exit	退出主菜单
Display	显示设置		


B：具体功能操作

Power on：关机状态在主菜单中选中“Power on”选项，按enter进入，显示屏显示开机动画：

- ① 电池连接2.2Ω雾化器时：
- ② 电池未连接雾化器时：
- ③ 电池连接雾化器短路时：


Power off：关机状态在主菜单中选中“Power off”选项，按enter进入，显示屏显示关机动画④：

Chinese | eVic supreme™ | 2

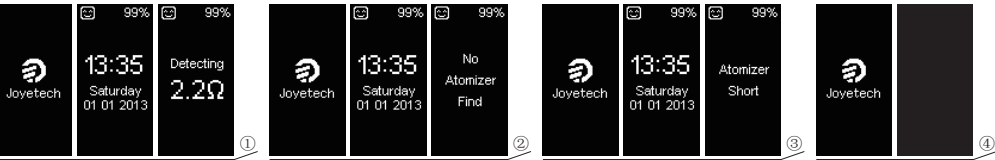


Vapor set：主菜单中选中“Vapor set”选项，按“enter键”进入第二级菜单，菜单操作过程中，方向键为菜单选择，“enter”键为菜单确认。

Switch 设备输出模式选择

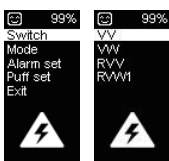


Mode 设备工作模式选择

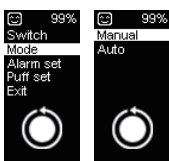

Manual 手动工作模式
Auto 自动工作模式
(注意：自动工作模式下你可以输入一段时间使你的eVic supreme保持工作状态，按“enter”键后你的eVic supreme将在你规定的一段时间内保持工作状态)
3.3S (方向键向左旋转，增加设置时间；方向键向右旋转，光标进行切换，按enter键确认)

3 | eVic supreme™ | Chinese

Alarm set 警告设置（此警告设置中，在设置的警告时间周期内，时间和口数只要有一个达到警告值，就会出现警告画面，如果在时间周期内，时间和口数都没达到警告值，再下一周期开始时时间和口数都会清零并重新开始计数） Never(选择此选项后自动返回上级菜单) Customizer(用户自定义) Exit(退出到二级菜单)

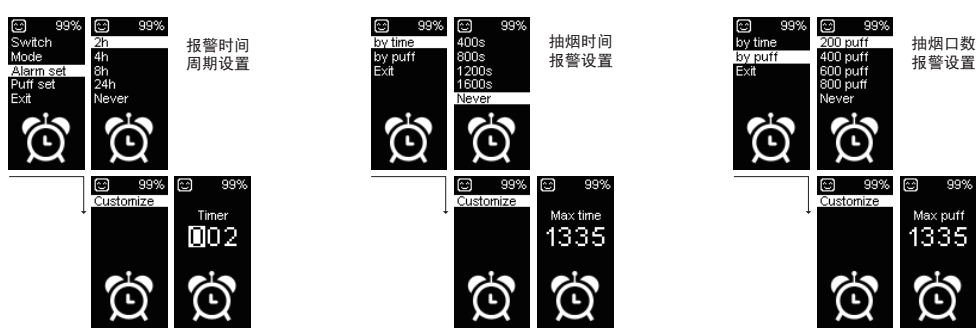


024h (方向键向左旋转，增加设置时间；方向键向右旋转，光标进行切换，按enter键确认)


3200s (方向键向左旋转，增加设置时间；方向键向右旋转，光标进行切换，按enter键确认)

0800 (方向键向左旋转，增加设置口数；方向键向右旋转，光标进行切换，按enter键确认)


Chinese | eVic supreme™ | 4

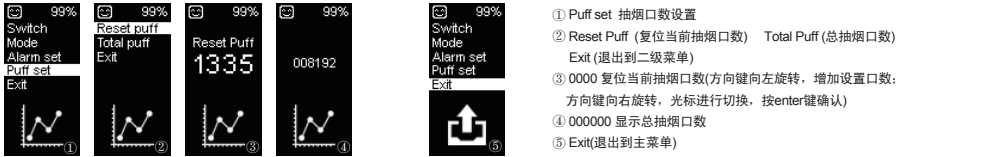


Configure：主菜单中选中“Configure”选项，按“enter键”进入第二级菜单，菜单操作过程中，方向键为菜单选择，“enter”键为菜单确认。

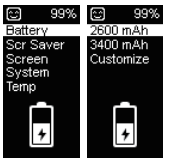

2600(方向键向左旋转，增加设置数值；方向键向右旋转，光标进行切换)

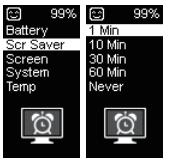


Scr Saver 屏保时间设置
00:01 (方向键向左旋转，增加设置数值；方向键向右旋转，光标进行切换，按enter键确认)

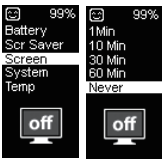

Screen 亮屏时间设置
00:01 (方向键向左旋转，增加设置数值；方向键向右旋转，光标进行切换，按enter键确认)

5 | eVic supreme™ | Chinese

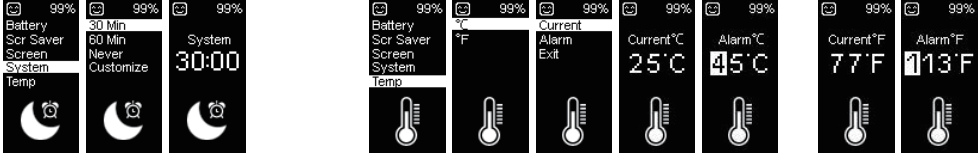

System 系统待机时间设置
00:30(方向键向左旋转，增加设置数值；方向键向右旋转，光标进行切换，按enter键确认)



Temp 设备温度设置：℃ 摄氏度 °F 华氏度
Current 当前设备温度查看(连接雾化器时才能查看温度) Alarm 高温报警设置
25℃/77°F (连接雾化器的时候显示当前温度) Please Insert Atomizer (未连接雾化器时显示)
45℃/113°F (方向键向左旋转，增加设置数值；方向键向右旋转，光标进行切换，按enter键确认)



Calendar 日历设置：24Hour 24小时制 ① Show Time显示设备时间 ② Set Time 时间设置 Set Data 日期设置 Set Year 年份设置
12Hour 12小时制 ③ Show Time显示设备时间 ④ Set Time 时间设置
(方向键向左旋转，增加设置数值；方向键向右旋转，光标进行切换，按enter键确认)

Chinese | eVic supreme™ | 6

Display：主菜单中选中“Display”选项，按“enter键”进入第二级菜单，菜单操作过程中，方向键为菜单选择，“enter”键为菜单确认。

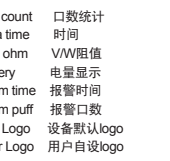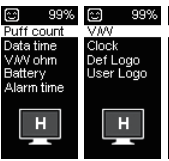

Boot Logo 开机动画设置
OFF 关闭开机动画
Def Logo 系统默认动画
User Logo 用户自定义动画
(通过MVR2.0导入)

Scr Saver 开机屏保设置
OFF: 关闭开机密码模式
Def Logo 系统默认屏保
User Logo 用户自定义屏保
(通过MVR2.0软件导入屏保)


Exit 退出

Device：主菜单中选中“Device”选项，按“enter键”进入第二级菜单，菜单操作过程中，方向键为菜单选择，“enter”键为菜单确认。



Stealth：主菜单中选中“Stealth”选项，按“enter键”进入子菜单，菜单操作过程中，方向键为菜单选择，“enter”键为菜单确认。

Reset：主菜单中选中“Reset”选项，按“enter键”进入子菜单，菜单操作过程中，方向键为菜单选择，“enter”键为菜单确认。

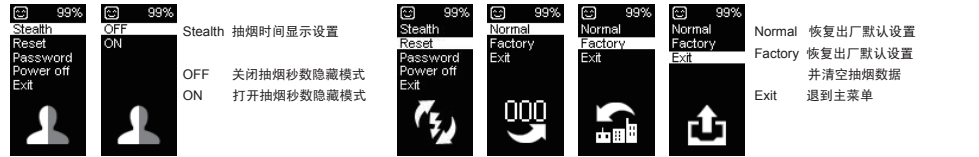


Chinese | eVic supreme™ | 8


Password：主菜单中选中“Password”选项，按“enter键”进入二级菜单，菜单操作过程中，方向键为菜单选择，“enter”键为菜单确认。

主要功能

选择“Power on”开机动画结束后黑屏，此时按“enter键”会出现以下画面：

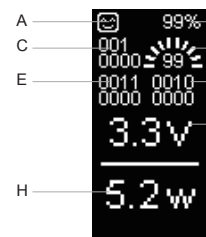

项 目	功 能
A	Smile icon笑脸图标(图标显示分3个等级, 显示越淡, 表示抽烟的口数或者时间离设置的最高抽烟口数或者抽烟时间越近)
B	电量百分比
C	主界面左1显示内容
D	主界面右1显示内容
E	主界面左2显示内容
F	主界面右2显示内容
G	当前所选择的输出模式
H	主界面下部显示内容

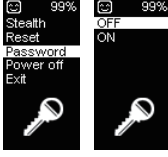


Password: 开机密码设置
OFF: 关闭开机密码模式
ON: 打开开机密码模式

主界面快捷键

1. 在VV和VW模式下，“方向键”向左旋转进行电压或者功率的减少，“方向键”向右旋转进行电压或者功率的增加。
2. 在VV和VW模式下，向左或者向右连续旋转“方向键”3次可以实现电压或者功率的连续减或者连续加，按“enter键”停止。
3. 连续按“enter键”3次，进入主界面显示内容选择快捷操作功能，“方向键”向右旋转，进行显示区域(C,D,E,F,G,H)的选择操作，被选中的区域会闪烁，此时“方向键”向左旋转进行显示内容的切换，按“enter键”确认。(注：在选择G区域时，是对输出模式的选择操作)

9 | eVic supreme™ | Chinese

- 正常工作：在正常连接雾化器时，此时长按“enter键”，雾化器工作，正常抽烟，显示屏显示抽烟的时间①，松开按键，此画面维持5S后黑屏，在5S间长按enter键，雾化器工作并重新计时，输出短路报警②。如果连接的雾化器短路或输出短路，长按enter键时，电池无输出并出现报警画面。
- 输出开路报警：③如果连接的雾化器开路或无雾化器连接时，长按enter键时，电池无输出并出现 报警画面。
- 工作超时保护：④为保护雾化器及电池，电池在连续工作10S时，会进入超时工作保护状态。
- 低电压保护：⑤当电池电量低于5%时，出现低电量报警提示，当电池电量为0%时，进入低电压保护状态，自动关闭设备。
- 开机密码保护：⑥启用此功能，开机时需输入设置好的4位密码(默认密码0000)，方向键为小键盘数字选择键，“enter”键为确认键，如果忘记密码，使用MVR 2.0软件可以找回或者重置密码(具体见MVR 2.0软件使用说明)
- 温度过热保护：⑦但设备温度超过温度保护设定值时，主界面会出现温度计图标闪烁提示，此时建议暂停使用设备，等温度下降后再重新使用。如果温度超过设备正常工作温度范围时，将出现高温报警界面⑧，并强制关断输出。
- 最大抽烟口数报警：⑨当抽烟口数超过设定的最大抽烟口数，主界面出现抽烟时不再显示秒数，而是显示“Max puff”报警信息。
- 最大抽烟时间报警：⑩当抽烟时间超过设定的最大抽烟时间，主界面出现抽烟时不再显示秒数，而是显示“Max time”报警信息。

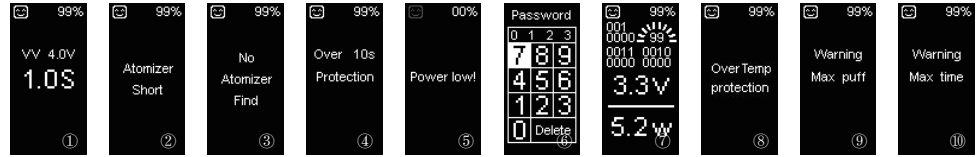


Chinese | eVic supreme™ | 10

- 电池超负荷保护模式：①当电池不能提供当前输出功率时，进入电池超负荷保护模式，此时需要：

1. 降低输出电压或功率
2. 用大阻值雾化器
3. 对电池进行充电或更换了换锂电池
4. 更换高倍率锂电池

- 充电状态：连接墙插充电时②；
连接电脑充电时③；
充电完成④：

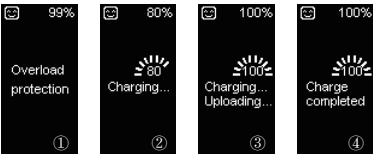

- *保证抽烟效果和电池正常工作，建议电池电量低于10%时及时充电！
- *为保证锂电池充电安全，请不要拿出锂电池充电！

锂电池介绍

为了保证产品的使用效果，建议使用原配锂电池或者高品质的高倍率锂电池，不建议使用普通锂电池。

PC端软件使用说明

注意事项

- 请确保你的eVic supreme只能由卓尔悦维修。请勿擅自维修，否则会导致产品损坏或人身伤害。
- 请在干燥的环境中使用eVic supreme，使用时温度在-10℃到60℃之间，充电时在0℃到45℃之间。
- eVic supreme所使用的部件为卓尔悦专门设计。请勿将eVic supreme与其他非权威的部件一起使用，否则将导致设备功能出错或导致设备损坏。

请参考你的保修卡，对于人为操作不当的损坏，我们将不负任何责任。保修卡不适用于从第三方经销商购买的产品。

卓尔悦公司对于本品牌的产品提供维修服务，保修条款如下：

1. 我们将针对卓尔悦的产品为最终用户提供免费维修，保修期为自购买之日起90天。
2. 若发生以下任何一个情况，我们将不再提供保修：
 - 客户没有提供质保卡和购买凭证
 - 因操作不当或非正常使用导致的损坏
 - 因用力过度而导致的损坏，如掉落或摔落
 - 因明知不可为而为之导致的损坏(请参照使用说明书里的注意事项)
 - 因烟液的不正当使用而导致的损坏(请参照使用说明书里的操作指南)
 - 因使用非卓尔悦产品的备件而导致的损坏(如充电器，电池和数据线)
3. 此保修政策不适用于个人项目或消耗物品和附属品，如：烟嘴，烟弹，雾化头，布袋，链子和小皮套
4. 非卓尔悦品牌的产品不在保修范围内，此保修政策只针对自购买日期起90天内的合格的卓尔悦产品有效。

解释权归卓尔悦所有，卓尔悦有权对本质保卡的内容做解释和修改。

11 | eVic supreme™ | Chinese

Chinese | eVic supreme™ | 12

Shenzhen Joyetech Electronics Co., Ltd.

Email: info@joyetech.com

Web: www.joyetech.com

MADE IN CHINA



the eVic supreme User Manual